
# Livewell XL Manual

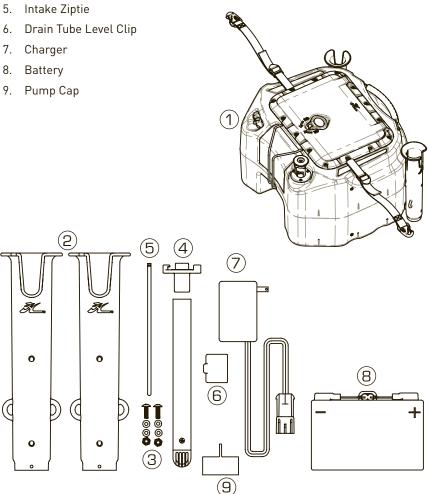

- Livewell XL Tank Assembly 1.
- 2. Rod Holders (2 additional)
- 3. Rod Holder Mounting Hardware
- 4. Intake Tube
- 5.






Plug in your charger and connect the charger cable to battery. The battery will take about 8-10 hours to fully charge.



Remove the battery cover and connect the battery to the tank connector





Replace the battery cover and stretch the Bungee ® over the lid.

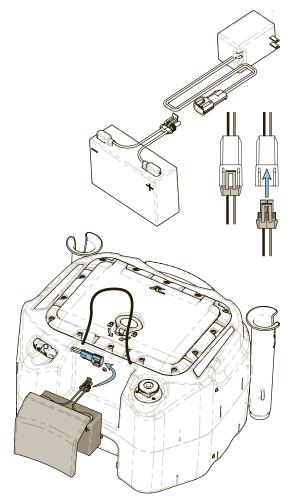




Turn the switch ON to test that the pump is working Off

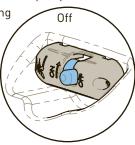

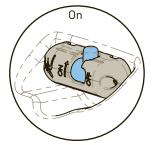

#### 4 | Intake Installation

Note: Small adjustment to the tube length and orientation need to be made before going out on the water. Follow the instructions on page 6 for adjusting the intake tube.

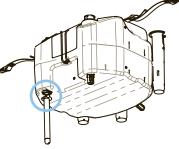




Align the intake connector with the tank connector. Notice that there is a small tab and a large tab that need to align.






Interlock the two tabs and twist the connection clockwise. NOTE: Tabs are different sizes

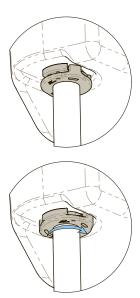




Plug the Livewell intake and drain tube into the cargo scuppers.

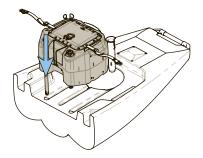


 Note that the ProAngler 17T has two different plug-in locations for the Livewell XL and may be arranged as shown below.






Attach the tie-downs to a nearby padeye and tighten the straps.

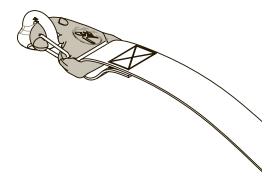


Because every model is slightly different, you may have to make some adjustments to the intake tube.

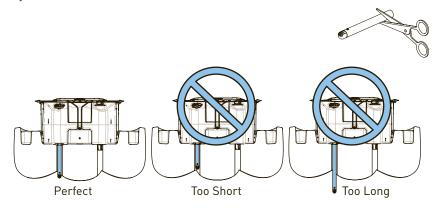




Spin the clear tube on the connector so the opening on intake screen faces forward towards the bow of the boat.

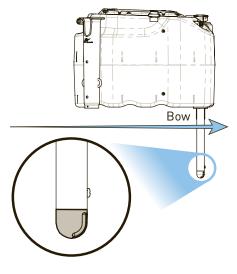





Once you have the tube rotated correctly, tighten and trim the zip tie around the connector and tube to hold in place.

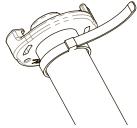




Remove the internal divider wall by flexing the outside edges of the wall and freeing them from the buttons on the wall.

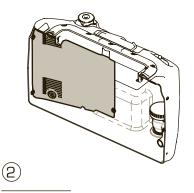

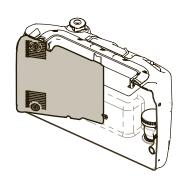

Attach the drain tube level clip over the middle hole if you want to fill the tank to the maximum capacity.

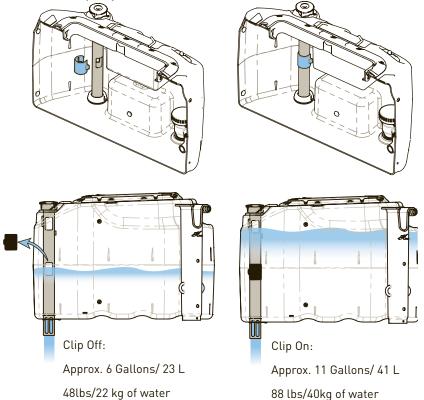

# Filling the tank




Turn the drain handle clockwise aligning the tab with the groove and push down to engage the drain tube.

 


Turn on the pump




The pump needs to be primed before water flows into the Livewell. Propel the kayak forward at 3 mph/ 5 kmph or faster. This will force water up the intake tube, prime the pump, and start filling the tank.

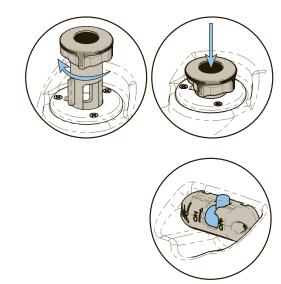



### **Holding Water**

If you want to conserve battery power or just want to eliminate any water flow, you can place the cap over the water inflow tube after it is full to prevent the water from draining out of the pump when the switch is turned off.

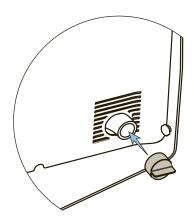

# **Changing Water Circulation**


The tube connected to the pump, protruding from the wall, diverts and concentrates the flow of freshwater in to the tank to create more current and circulation. This will work well for most species of bait fish and fin fish. The tube can be removed from the pump to reduce the amount of current in the tank for smaller bait species.



### Draining the Tank




Turn the pump off

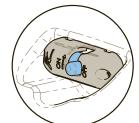



Turn the drain tube counterclockwise and pull up to open the drain. Once the drain is all the way up, turn it slightly to the left or right to hold the tube in the up/open position.

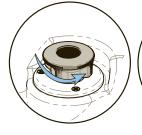



#### Tank Care

Because the Livewell assembly contains electric components, use care storing it. Proper maintenance is vital to keeping your Livewell working properly.

Washing

Keeping your well and pump clean by washing it in fresh water and letting it dry. This will help to prevent salt and mineral corrosion.

**Battery Care** 

When not in use, unplug the battery from the Livewell and keep it stored in a dry place. If you are storing the battery for a long time, be sure to fully charge it before storing. Recharge the battery for best care.


Mildew and Odor Prevention

When storing, you should allow the inside of the Livewell to dry and keep the hatch open to allow for airflow.


# 10 | Optional Rod Holder Installation

The Livewell XL comes with two pre-installed rod holders and two additional rod holders for custom installation. More rod holders can be purchased and installed.

Possible rod holder locations for ProAngler 12 & 14

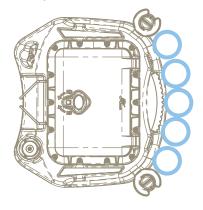


Possible rod holder locations for

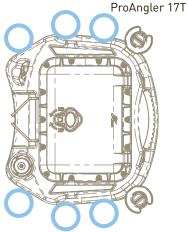




Drill a 3/16" hole in the pre-located dimples on the tank

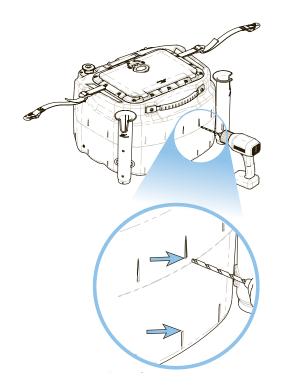




Install the mounting screw into the rod holder.



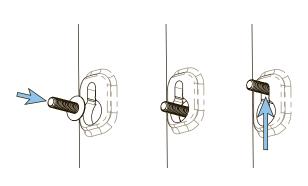



Thru-bolt the rod holder to the tank so that the nuts are tight. Do not overtighten as it can damage the rubber gasket.

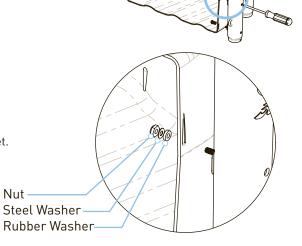



### **Hobie Cat Company**

Holding Company

Oceanside, California, USA 1-800-HOBIE-49 hobiecat.com

### **Hobie Cat Australasia**

Subsidiary

Huskisson, New South Wales, Australia 1-800-4-HOBIE hobiecat.com.au

#### **Hobie Cat Europe**

Subsidiary

Toulon, France +33 (0) 494 08 78 78 hobie-cat.net

### Hobie Kayak Europe

Independent Distributor

Stellendam, The Netherlands +31 (0) 187 499 440 hobie-kayak.com

#### Hobie Cat Brasil

Independent Distributor

Bahia, Brasil +55 (73) 9982 2424