# Adjustable H-Bar



## 2 | Parts

- 1. Left Vertical Bar Assembly
- 2. Right Vertical Bar Assembly
- 3. Short Center Tube
- 4. Medium Center Tube
- 5. Angled Foot Mounts
- 6. Straight Foot Mounts
- 7. H-Rail Foot Mounts
- 8. Center Tube Mounting Hardware
- 9. Foot Mount Mounting Hardware
- 10. Pull Pin Screw Replacement Hardware
- 11. Tie-down Assembly

0

3





0

(1)

Insert the correct middle tube that pertains to the correct kayak. The long tube is for ProAngler 12, 14, and 17 (front position only). The small tube is for the smaller kayaks like the Outback, Sport, and Revolution.



2

Bolt the middle tube to the two upright tubes using the provided hardware





### 4 | Mounting To Your Kayak

The H-Bar will attach to your kayak using 1 or more of the 3 mounting options

2

- 1. Angled Mount
- 2. Straight Mount
- 3. H-Rail Mount

Please note that the diagrams below are only guidelines. Before drilling and mounting any of the foot mounts, adjust the H-bar to your liking and place it on your kayak to test the various locations. Try it in the standing up and folded down positions to see where it rests on the kayak. In the standing up position it should support the user around the belt line. Help from a second person to hold the bar in place is recommended.

If you are using the H-Rail mounts, it is important that that the tabs are on the inboard side of the rail.

The Angled and Straight Mounts will be attached to the kayak by throughbolting it using the provided hardware.

́З



#### Kayaks

When mounting the foot mounts to most kayaks, you will be using the STRAIGHT mounts. The front feet will go ahead of the cockpit area and the rear mounts will go just in front of where you are seated. Since kayaks come in all different shapes and sizes, it is important to get the H-Bar and rest it on the kayak to test the positioning of the mounting feet.



# 2014 and Older ProAngler 12&14

On 2014 and older ProAnglers, you will be bolting the ANGLED foot mounts to the front and back of the mounting boards.



# 2015 and Newer ProAngler 12&14

On 2015 and newer ProAnglers, you will be mounting the ANGLED foot mounts to the front of the mounting boards. For the back foot mounts, you will attach the H-rail foot mounts to the railing (making sure tabs are inboard).



# ProAngler 17

On ProAngler 17t's, you will be mounting the ANGLED foot mounts to the kayak to the right of the forward hatch. For the back foot mounts, you will attach the H-rail tabs to the railing (making sure tabs are inboard). If you want to have the stand up bar in the middle of the boat, you will need to get the ProAngler 17t H-Bar extender kit.



### Locking the Feet



Place the H-Bar feet over the foot mount and insert the pin.







If you want to make the H-Bar a more permanent installation, you can remove the pin and use the provided hardware to bolt the feet to the mounts.





# Adjusting Leg Length



Unscrew the adjustment knob and remove





Slide the H-Bar leg to the height that you want.





Align the adjustment hole and thread in the adjustment knob.







#### Hobie Cat Company Holding Company

Oceanside, California, USA 1-800-HOBIE-49 hobiecat.com

#### Hobie Cat Australasia

<sup>Subsidiary</sup> Huskisson, New South Wales, Australia 1-800-4-HOBIE hobiecat.com.au

#### Hobie Cat Europe

Subsidiary Toulon, France +33 (0) 494 08 78 78 hobie-cat.net

#### Hobie Kayak Europe

Independent Distributor

Stellendam, The Netherlands +31 (0) 187 499 440 hobie-kayak.com

#### Hobie Cat Brasil

Independent Distributor Bahia, Brasil +55 (73) 9982 2424

> PN 84500114 REV 150205