



Wave: Remove main halyard pulleys from mast head fitting. Slip mast float (blunt end forward) over mast halyard fitting. Re-install pulleys, with screws and nuts from kit, thru float fitting and halyard fitting.

