
Part #: 72020400

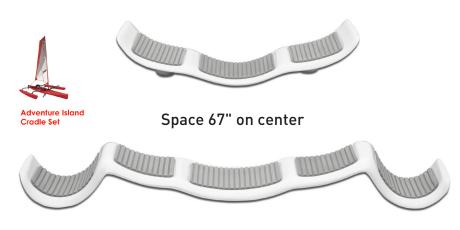

Before you install the cradles note that there is a front and back direction to each cradle. The forward cradle is slightly tapered and more narrow at the front. The rear cradle


the front to match the hull of your Adenture Island.


We do not include mounting hardware since each trailer, rack system or storage arrangement differ and require differnt sized hardware.

Wait to install the Neoprene pads until after you have your cradles mounted and hardware secured. Clean the recessed pockets that the neoprene will be installed into before you peel & stick them in place.

When tying your Island down for transport, it is recommended that the main hull and amas be tied to the trailer separately. Tying the main hull and amas together (line across the load) will pull the main hull and amas against each other. In addition, release any shock cords used to hold the amas against the main hull. Amas held tightly against the main hull can cause damage to the hull surfaces as they rub together. Padding may be placed between hull and amas to protect the surfaces if needed.

## Installation Tips for your Hobie Mirage Adventure Island Cradle set.

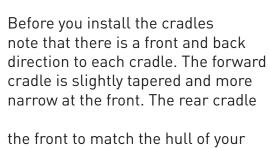

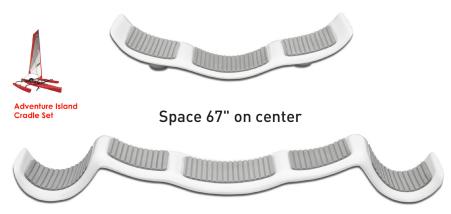

the front to match the hull of your Adenture Island.

We do not include mounting hardware since each trailer, rack system or storage arrangement differ and require differnt sized hardware.

Wait to install the Neoprene pads until after you have your cradles mounted and hardware secured. Clean the recessed pockets that the neoprene will be installed into before you peel & stick them in place.

When tying your Island down for transport, it is recommended that the main hull and amas be tied to the trailer separately. Tying the main hull and amas together (line across the load) will pull the main hull and amas against each other. In addition, release any shock cords used to hold the amas against the main hull. Amas held tightly against the main hull can cause damage to the hull surfaces as they rub together. Padding may be placed between hull and amas to protect the surfaces if needed.