




T-HANDLE UP/DOWN BLOCK REINFORCEMENT KIT

Due to the additional loads on the up/down control system with the rudder mounted eVolve™, we recommend inspecting the screws attaching the internal block for the up/down system. The blocks are located inside of your kayak in front of your seated position. Look for the exposed screw heads near the cockpit area, or reach inside and follow the lines to the point where they make a turn. If you have just one screw **(A)** or if flat head screw **(B)** are used, replace the hardware with the screws included in this bag. If you have two large-headed screws **(C)** holding the block in place, no replacement is necessary.

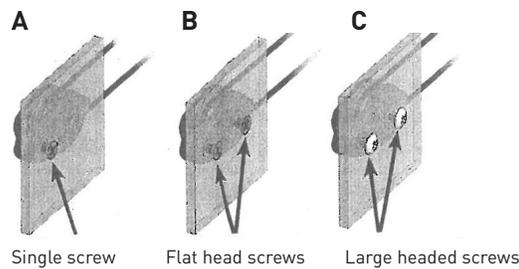

If you only have one screw holding the block **(A)**, an additional hole will need to be drilled to bolt through another location. To drill a new hole, locate the single screw currently holding the block and drill a 3/16" hole 1-1/8" back from the center of the current screw. This will allow the new hole to align with the other bolting location on the block.

Illustration **(D)** shows the new installation with the provided screw and nut.

The longer screw goes through the thicker end of the block.

