

**Parts list:**

- |                              |                                   |
|------------------------------|-----------------------------------|
| <b>2- trapeze wires</b>      | <b>2- trapeze dog bones</b>       |
| <b>1- 5/16" shackle</b>      | <b>2- rope locks</b>              |
| <b>2- eye straps</b>         | <b>2- trapeze adjustment line</b> |
| <b>4- 1/4-20x 1/2 screws</b> | <b>w/internal shockcord</b>       |

**STEP 1**

Hang the 5/16" shackle in place of the original shroud on the mast. Install the shrouds and forestay then hang the trapeze wires from the outermost sides of the shackle. Tighten the shackle with pliers. If the mast will be left up over long periods it is best to also install a keeper wire through the shackle pin to prevent it from backing out. Step the mast.

**STEP 2**

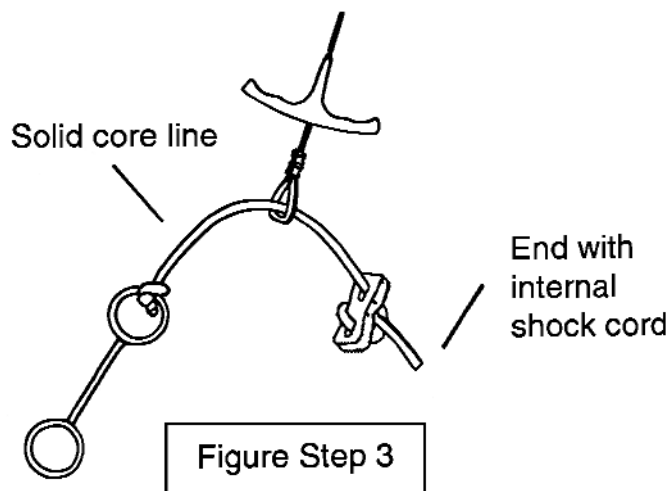
The eye straps attach to the outboard side of each hull. Locate the two buttons that are opposite the center trampoline hook on each hull. (\*If there are no small plastic buttons here, you may have an older Wave. See notes below\*). Club Waves have no trampoline hooks but can still locate two buttons near center of hull. Remove the small button caps from the screw holes. Install one eye strap per hull with the screws provided.

**STEP 3**

Attach the rope lock and dog bone as in figure 3.

**STEP 4**

Tie the shockcord end of the line to the eye strap on each hull.

**\* Older Wave Notes:**

After Spring of 95' the trampoline center hook is installed into a molded-in fitting that is found on both sides of each hull (note the two caps over screw holes on the outboard side of each hull). Boats older than Spring 95' will have to install an inspection port to access the inside of the hull to back up screws with nuts and washers (not provided).