Parts list:

(1) Hobie wire plug

(2) Hobie wire adapters


(3) Battery

(4) 2X wire connectors

(5) Battery holder

(6) Pigtail connector

(7) Battery charger

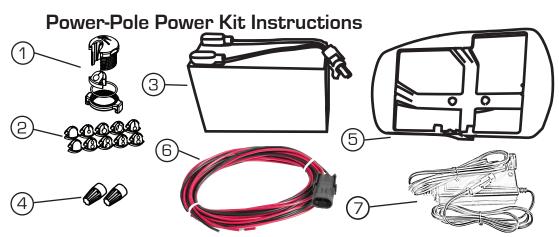

Note: Instructions are based on installation on a Hobie Pro Angler 14. Installation may vary on other models. Tools neded: #2 phillips screwdriver, wire crimpers, 1" drill bit.

Drill a 1" diameter hole where you would like the Power-Pole power cable to enter the kayak hull. Use the appropriate rubber adapter that best fits the diameter of the cable with the Hobie thru hull plug to seal the hole.






2 Install the Power-Pole in line fuse. Use the wire connector provided with your Power-Pole Micro to connect one end to the red (+) wire on the power cable. Connect the other end to the red wire (+) of the pigtail wire with one of the two wire connectors provided in your kit.

(3) Connect the black (-) wire on the power cable to the black (-) wire on the pigtail with the other wire connector

provided in your kit.





(5) Insert the battery in to the battery holder and plug it in. Note: Your battery will need to be charged using the provided charger for the Power-Pole Micro to operate.

(6) Use the provided zip ties to tidy up any excess wire inside the kayak hull.

12V Battery Charging Instructions: Plug the battery in to the battery charger making sure the tab on the male pigtail aligns with the clip on the female pigtail. Plug the battery charger in to an electrical outlet. If the light on the charger turns red the battery is in need of charging and should remain plugged in until the light turns green. A green light means the battery is charged and the charger has switched to trickle charge. At this point it is ready to be unplugged from the socket and used.

