

## Directions for Installation

1) Pull up on the Velcro webbing at the junction of the seat base pad and back rest to expose the top (screw) of the standard pegs. Remove the screws holding the pegs in place. Remove the pegs.



FIG 1

2) Install / Assemble adjustable parts as shown in FIG 1. The hole in the seat may need enlargement to accept the diameter of the brass fitting. You can use a soldering iron to melt the holes larger or X cut with a sharp knife.

3) Place the seat (pegs) into one of the seat positions in your Hobie Mirage Kayak. May require a slight tension adjustment of the peg prior to inserting into the hull to get the adjustment started.

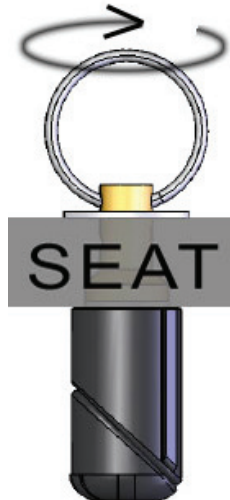


FIG 2

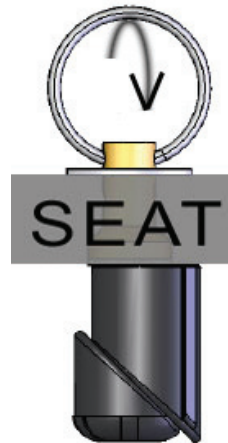


FIG 3



FIG 4

4) Flip up the adjustment rings and turn clockwise to tension the pegs (finger tight only). FIG 2.

5) Flip the ring down and cover with the Velcro webbing. FIG 3-4.

Properly adjusted seat pegs will keep the seat base in place.

Note: The new seat pegs REQUIRE adjustment to place the seat tightly in the hull. They then may require you to loosen the peg adjustments to remove the seat.

Revised 10/06/2009