

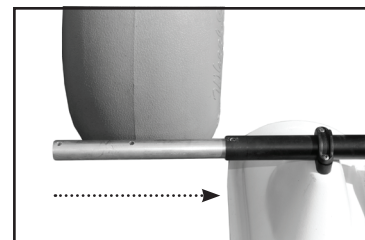


1. Depending on which wheel style is used with the dolly, slide the telescoping inner axle to the appropriate location on the outer axle.

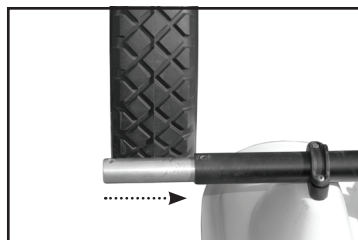



2. Secure the inner axle and webbing strap to the outer axle using the 1/4" bolt and nut.

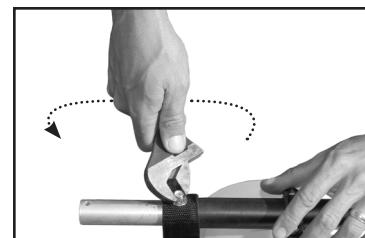

3. Slide the wheels on the inner axles and secure with keeper pin.



4. Slide the carry handle into the tube on the dolly frame and secure with keeper pin.

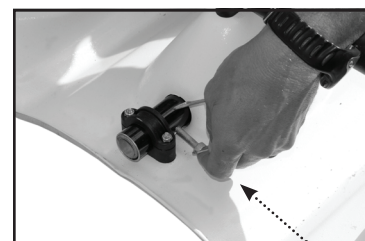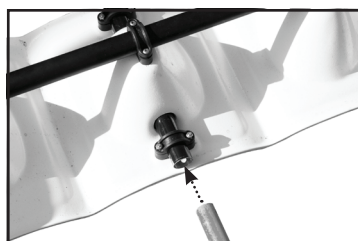

5. Secure dolly to the Island using webbing strap and buckles. Note the different locations of the dolly on the Island when the amas are in the open or in the closed configurations.



6. The carry handle can remain on the dolly during use under the Island. The webbing straps can be secured around the ama cradle to avoid dragging while transporting the dolly.



Updated 4/7/2015